

What Replacement Ballast do I need for my Minipure® MIN-1, Min-1.5, Min-3, MIN 6 or MIN 9?

Figure 1 - Tab Ground



If you have this ground and a **Minipure®** unit you need a **10-0518A** Replacement Ballast for 120v 50/60 Hz or **10-0514A** Replacement Ballast for 220v 50/60 Hz

Figure 2 - Stud Ground



If you have this ground and a **Minipure®** unit you need a **10-0508B** Replacement Ballast for 120v 50/60 Hz or **10-0504B** Replacement Ballast for 220v 50/60 Hz

