



451 Black Forest Road Hull, IA 51239 Ph: (712) 439-6880 Fax: (712) 439-6733

---

## OZV-8 Ozone Generator



## Installation and Operation Manual

*It is the responsibility of the owner to thoroughly read and understand all the contents of this manual.*

## Table of Contents

	Page
Cautions, Warnings and Hazards .....	3
Introduction .....	4
Installation.....	4
Operation .....	4
Maintenance .....	5
Specifications.....	5
Certifications .....	6
How to Contact Ozone Solutions .....	6

## **Cautions, Warnings and Hazards:**

Ozone is a powerful oxidizing agent. Observe strict operating procedures when using ozone equipment. ***It is imperative that only ozone compatible materials be used in conjunction with the ozone system.***

Ensure that the Ozone Generator is in a well-ventilated area. Do not allow rain or condensation to contact the Ozone Generator. The Ozone Generator is not weather proof. The unit must be operated indoors or in an enclosure in a non-condensing environment.


*Note: If the operator has asthma, he/she must not enter ozonated airspace. Ozone can induce and an asthma attack.*

Carefully review and familiarize yourself with the following important safety information statements concerning the Ozone Generator.

- WARNING** Ozone is an extremely aggressive and powerful oxidizer. The Occupational Safety and Health Administration (OSHA) 8-hour exposure limit is 0.10-PPM. The OSHA 15-minute exposure limit for ozone is 0.3 PPM. Above 0.3 PPM, there is the risk of damage to respiratory tissues.
- WARNING** People who have no sense of smell should not operate this equipment.
- WARNING** **Never** attempt to verify ozone production by directly breathing or smelling the ozone outlet or the ozone-tubing outlet.
- WARNING** The ozone generator contains high voltages. Unauthorized entry can result in serious injury or death. For service instructions, contact Ozone Solutions.
- WARNING** Make sure all tubing connections between the ozone generator and the injection point are secure, and in good working condition. Failure to do so could result in the discharge of ozone into an undesired space.


**Introduction:**

The Ozone Generator produces ozone from oxygen via corona discharge. The Ozone Generator is capable of generating 8-gm/hr of ozone with a feed gas of 90% oxygen at 10-l/min. Ozone is used for pathogen inactivation and destruction of odorous gases.

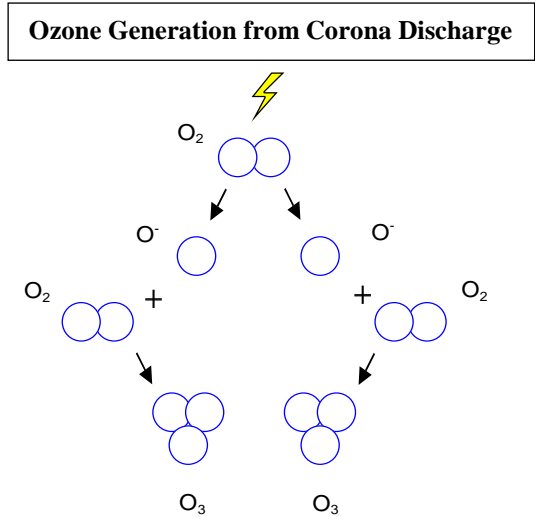

**Ozone Output:**

8-gm/hr at 5-l/min of 90% oxygen concentration feed gas - 4 gm/hr on 5.5 lpm of dry air.

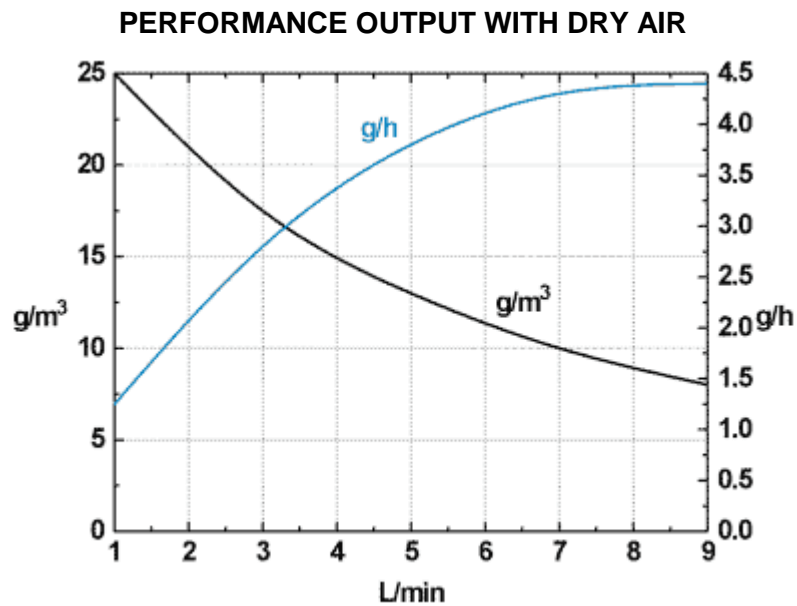

**(With oxygen, the outputs and concentrations are doubled.)**

**Installation:**

Hang the OZV-8 by using the holes provided on top of the case on a secure wall. Connect the ozone fittings as directed on the bottom of the unit. Do not lay items on the ozone generator, as it is not designed to carry heavy loads.

Be certain there is sufficient access space around the Ozone Generator to perform normal maintenance and service. Also ensure there will be a free flow of cooling air around the unit. Connect the unit to a grounded power source rated for the voltage and current requirements.

**IMPORTANT:** Choose a location for the Ozone Generator that does not allow rain or condensation to contact the unit. The Ozone Generator is not weather proof. It must be operated indoors or in an enclosure in a non-condensing environment.

Ozone/Oxygen Hook-up:

The ozone and oxygen outlet connection is 1/4-inch slip connection on the bottom of the unit. Secure the ozone and oxygen tubing with a clamp to ensure no gas leaks from the connections. Spray the fitting with soapy water when oxygen is flowing through the unit to ensure no leakage.

**IMPORTANT:** Ensure that the oxygen flow is measured and controlled to rates that do not exceed rated capacity of the ozone generator flowmeter.

Operation:

To start the Ozone Generator, connect the unit to a grounded power source rated for the voltage and current requirements. Push the toggle switch on the front panel to the up position. The "ON" light will illuminate indicating ozone production.

Internal fuses protect against damaging power fluctuations. If a fuse blows the fuse indicator will be lit. This generally means the fuse and PC board needs replacement. Contact Ozone Solutions if fuse indicator is lit.

The very bottom light (NO FLOW light) on the panel can be ignored. This light is left in place to allow optional features to be possibly implemented. *This light will not turn on. If you wish to implement another feature to your OZV-8, please contact Ozone Solutions.*

(Optional) If a unit was ordered with a 10-position switch, the operator can adjust the ozone output. The switch allows an ozone output between 0-100% in increments of 10%. (eg. A setting of 0 indicates 0% output; a setting of 10 indicates a 100% output.)

**IMPORTANT:** Ventilation must be provided to prevent the accumulation of ozone in the event of an ozone leak. Approximately 6 air-changes per hour are recommended.

**IMPORTANT:** The flowmeter installed on the Ozone Generator is set to read accurately when the discharge is to atmospheric pressure. If the actual discharge pressure is above atmospheric pressure, the reading can be adjusted to determine the precise flow rate, according to the following formula (using psig):

$$(\text{adjusted flow}) = (\text{measured flow}) \times \sqrt{\frac{\text{oxygen pressure} + 14.7}{14.7}}$$

**Maintenance:**

As long as the feed gas is kept dry, dust free, and pure, the ozone generator will not need maintenance. Ensure strict maintenance procedures of the oxygen generator as specified in the oxygen generator manual. If maintenance is required, please contact Ozone Solutions.

**Specifications:**

**Feed Gas Requirements:**

Air or oxygen dried to a minimum of minus 70-deg F dewpoint. No minimum airflow required. Maximum airflow of 10 l/min. Pressure must not exceed 5-PSI or vacuum exceed 10-in Hg.

*NOTE: If oxygen is being used, the flow switch has been removed & the NO FLOW light can be ignored.*

**Electrical Input:**

100-120 V, single phase, 50/60 Hz, 1.2 Amps, 130 Watts (230V/50Hz with the foreign voltage)

**Environment:**

The Ozone Generator is not weather proof; it must be operated indoors or in an enclosure in a non-condensing environment. Sufficient ventilation must be provided to prevent the accumulation of ozone in the event of a leak.

**Temperature: -40 to +95 degree F max**

**Humidity: 0 to 85% RH**

**Mechanical:**

Dimensions: 17"H x 10"W x 5"D

Weight: 18-lbs

**Certifications:**



**How to Contact Ozone Solutions**

By mail:

*Ozone Solutions, Inc.*  
451 Black Forest Rd  
Hull, IA 51239

By telephone:

(712) 439-6880

By fax:

(712) 439-6733

By e-mail:

[sales@ozonesolutions.com](mailto:sales@ozonesolutions.com)

Website:

[www.ozonesolutions.com](http://www.ozonesolutions.com)